

Please, read it first.

MFO3 - Before starting Operator Workspace installation

Overview

These Service Notes describe and clarify some issues occurred after the system shipping, during the Operating System and Application CDROM material list check and verification.


Moreover, it is reported by some sites that, the instruction regarding MOD jumper setting described in the Class A Service Manual CDROM, was not easily found by the local engineers. These Service Notes elucidate the necessary information to perform the jumper configuration to avoid Save Info procedure and further Option Software installation troubles.

1. Where are the Operating System, Application and Class A Service Manual CDROMs?

The GEMS Linux OS, Application Software and Class A Service Manual CDROMs are enclosed in the Operator Manual package.

2. How to perform MOD Jumper Setting?

MOD jumper setting is shown below. The MOD is located in the Operator WorkSpace Console.

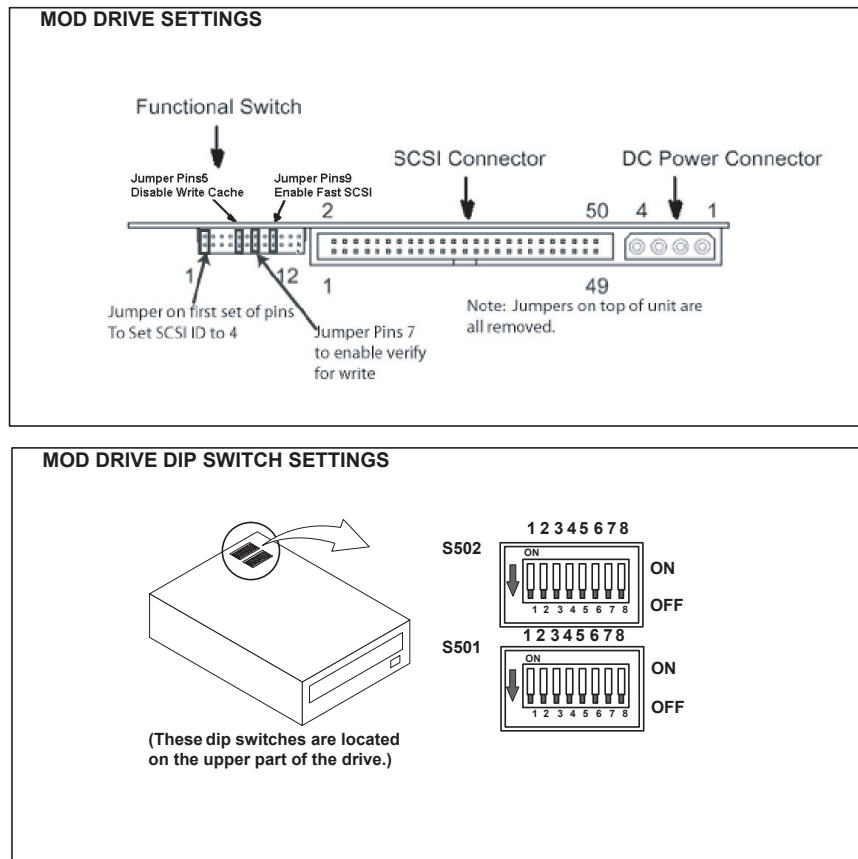

2. How to perform MOD Jumper Setting? (continued)

For more details, please refer to Class A Service Manual CDROM at:

- Installation Manual

- a.From Signa Ovation Service Documentation main menu, click on Installation.
- b.Select [**MFO3 Installation Flow Chart with hyperlink**];
- c.Click on [**3 - 4**] button;
- d.Click on [**OC Cables Wiring**];
- e.Refer to sections **16 MOD Drive Settings** and **17 MOD DIP Switch setting**.

- Replacement Manual

- a.From Signa Ovation Service Documentation main menu, click on the Operator Workspace illustration;
- b.Select [Replacement and Maintenance];
- c.Refer to section **2-7 MOD Drive**.

Helio Hiwatashi

GEYMS TP Gr. -MR