

TABLE OF CONTENTS

TABLE OF CONTENTS.....	1
1- Procedure	2


Rev 0

1. Procedure

1. Turn the each breakers ON.
 - a. Turn the GRADIENT breaker ON. Verify that the FAN of GPS is working.
 - b. Turn the System Cabinet breaker ON. Verify that the FAN of SC is working.
 - c. Turn the OC/HOST PC breaker ON.
 - Turn the Host computer power ON and verify that the Host Computer boot up.
 - Turn the PC power on and verify that the PC boot up.

DANGER!!

SSM OUTPUTS VERY HIGH VOLTAGE. BE SURE TO TURN THE SSM POWER OFF BEFORE CONNECTING DC BIAS CABLES. HANDLING DC BIAS CABLES WITHOUT TURNING SSM POWER OFF MAY CAUSE SERIOUS INJURY OR DEATH DUE TO ELECTRIC SHOCK.

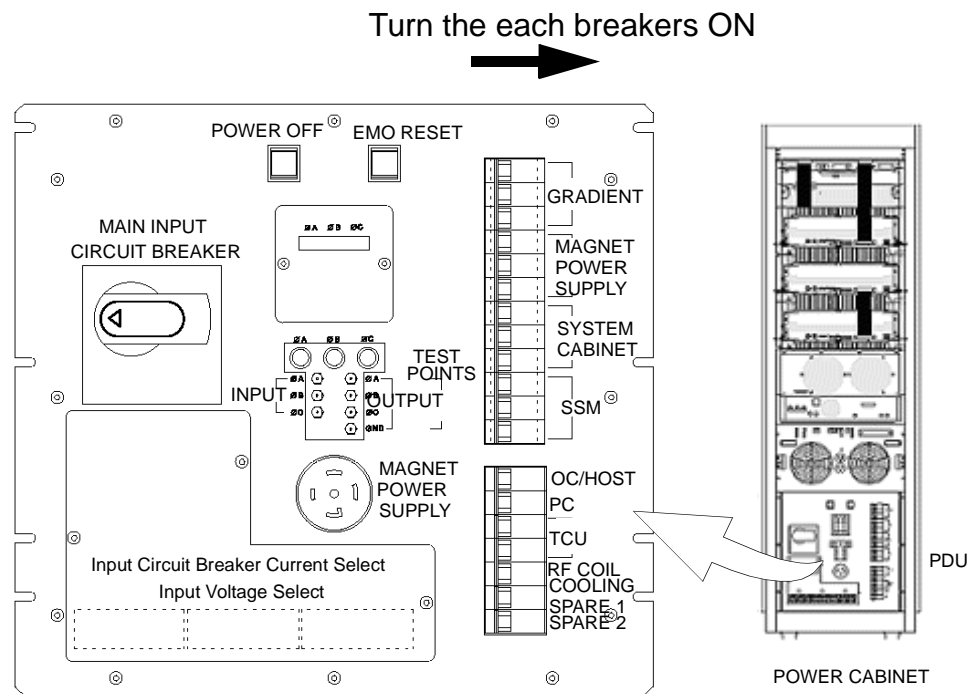

**PDU FRONT PANEL
ILLUSTRATION 1-1**

Rev 0

Revision History

Rev	Date	Auther	Primary Reasons For Change
0	Dec 13, 2000	Y. Masumo	Initial Release